Disabling Print Director on Konica Minolta e-Series devices

If you have access to Resource Manager, the best way is to completely remove the embedded applications from the device.

If you do not have access to Resource Manager (perhaps the SQL database is down), then skip the section below to the next section **Disabling Authentication via the Web Interface**.

Removing Print Director applications via Resource Manager

- Open **Resource Manager** (Start > Programs > Print Director 2 > Resource Manager).
- Navigate to **Device Management > Shared Devices**.
- Double click the device on the right.
- Click the **Controller** tab.
- Click the **Printing** tab.
- Ensure Enable Secure Document Release checkbox is unticked.
- Click the Initialisation tab.
- Click Gather Info
- After the process is complete, highlight both applications in the list and click **Delete Application**.
- Click OK.
- Click PDAgents.
- Right click the print server on the right and choose **Refresh**.

If you would like to stop PD from tracking the print queues for that device, simply delete the Shared Device from the list.

Disabling Authentication via the Web Interface

If you don't have access to Resource Manager, or perhaps because the **Delete Application** process failed, you can disable authentication via the web Interface of the MFP.

- Open a web browser and enter the IP address of the device in the URL and press enter.
- Log in as Administrator (default password is 1234567812345678).





🗲 🕲 192.168.1.	95/wcd/top.xml 🔻	C Q Search	☆ 自 ♥ ↓ 佘 ∢ 弛 - ♥					
KONICA MINOLEA LE PAGE Web Connection								
	Login	O Registered User PIN	*					
		Administrator						
	View Mode	⊖Flash	● HTML					
		Flash Player is nece	ssary to see in Flash form.					
	Display Speed	O Quick Mode	Standard Mode					
		To speed up the disp	lay speed using the cache in quick mode.					
	User Assist	Display dialog box in case of warning.						
	Language	English (English)	~					
			Login					
Starting-up Data Management Utility								
Flash Player is required to use the Data Management Utility.								
	Manage Copy Protect Data							
	Manage Stam	ip Data						

- Click the User Auth/Account Track menu.
- Under General Settings, change the User Authentication drop down to OFF and click OK.

Main	tenance	Syste	em Settin	gs :	Security	Aut	User h/Account Track	Network	Вох	
Print Setting Store		Store A	ddress	Wizard		Customi	ze	To Main Menu		
► General Settings				Genera	al Settings					
Prohibited Function Login Setting			jin	User Authentication Overwrite User Info				OFF Allow ~	\checkmark	
Print without Authentication			ation	Update Billing Information				Restrict ~		
Simple Print Authentication Setting			tion	Default Authentication Method			ethod	ON (External Server) 🗸		
				Public User Access				Restrict ~		
External Server Settings			S	Ticket Hold Time Setting (Active Directory)			(Active	600 Minute (1-600)		
Public User Box Setting				Account Track				OFF ~		
User/Ac Setting	count Con	nmon		Account Track Input Method			od	Account Name & Password $ \smallsetminus $		
Scan to Home Settings				Synchronize User Authentication & Account Track			tication &	Synchronize ~		
Scan to	Authorize	d Fold	ler	Numb	er of Counters	Assi	gned			
Setting	Settings			User Counter				(1-999)		
Authen Number	Authentication Card ID Number			Enhanced Counter				0 (1-999)		
Mullipe				When Number of Jobs Reach Maximum			ach	Skip Job 🗸		
				Temp Inforn	orarily Save A nation	uthent	ication	Disable \smallsetminus		
				R	econnection S	Setting	IS			
			Reconnect for every login							
					Set R	econn	ect Interval			
				Reconnection Time			in Time	10 M	inute (1-1440)	
				Expiration Date Settings Expiration Date			ngs	42 Disable V	ay(s) (1-999)	
									OK Cancel	

• Now log out of the printer.





Disabling Authentication from the printer panel

If you don't have access to Resource Manager or the web interface of the printer, you can disable authentication via the printer panel.

- Press Menu (hard key) then Utility.
- Touch Administrator Settings.
- Enter the password (default is 1234567812345678).
- Touch User Authentication/Account Track.
- Touch General Settings.
- Touch User Authentication.
- Touch OFF then OK.

Poolmark	You can specify the User Authentication method. For Main + External Server or Main + Enhanced Server, you can use the default authentication method.								
DUOKIIIdi K	Administrator Settings > Authentication Method > User Name								
	Authenticate	0FF 1 /2	≪Back						
Utility	Authentication Method								
+	ON (MFP)	External Server Authentication	Enhanced Server Authentication						
Administrator Settings		Main + External Server	Main + Enhanced Server						
+									
User Authentication/ Account Track									
+									
General Settings									
+									
User Authentication	2015/11/11 15:19		ОК						



